


## Space Heating

If you have forced air heat, change your furnace filter every two months. Make sure you have a heating contractor inspect your furnace annually. Open the vents in the rooms that you use and close vents in rooms that aren't used as much.

If you have radiant floor heat, don't raise and lower the thermostat setting. Leave it at one temperature constantly.

If you have electric baseboard heat, make sure you have at least four to six inches of clearance between any furniture and your baseboard heaters. Turn thermostats down to 50° when no one is using the rooms or when you're gone. Close the doors to unused rooms.

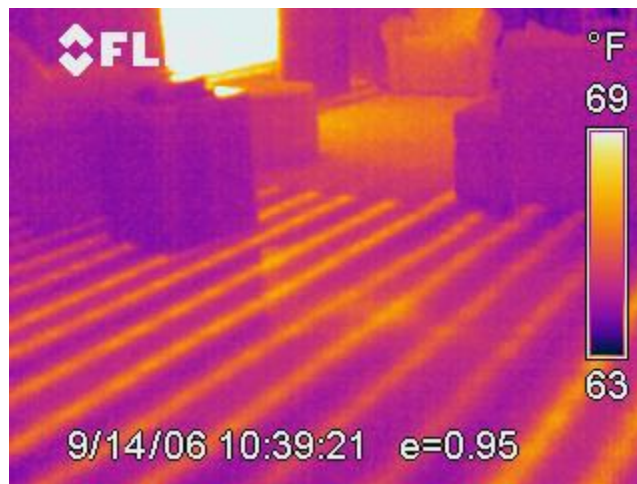

**A photo from an infrared camera showing radiant heat tubing in a concrete slab.**